

## Stainless Shelves Upgrade Assembly Instructions



Follow these instructions when converting bamboo side shelves to stainless steel or Platinum grade.



## <u>Parts</u>

## **Included Parts:**

- 2 Stainless Steel Shelf Tops
- 8 M5 screws and Nuts




## Other Required Parts (not included)

 Pair of assembled bamboo side shelves from Saffire Cart Kit (Silver Class or Bronze Class)



Take one assembled bamboo side shelf. Place shelf upside down on a soft surface

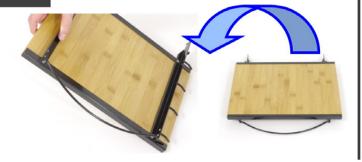

Step 2. Remove all 4 wood screws that connect the metal shelf frame to the bamboo.



Lift the metal shelf frame off of the bamboo. (The metal rims on each end of the bamboo can remain on the bamboo)



Step 4.

Take one stainless steel side shelf top and flip it over upside down on a soft and clean surface.


(Remove any protective factory tape)




Step 5. Take the metal shelf frame, that was just removed from the bamboo, and place onto the Stainless top and line up the 4 holes.



Step 6. Prepare to fasten the metal shelf frame to the stainless top using one M5 screw and nut for each of the 4 holes.

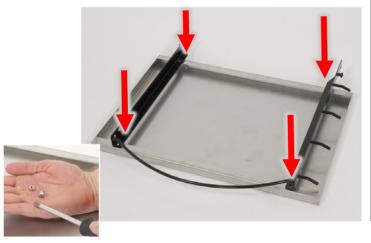

Place the nut on the tip of a screw driver or hold with a pair of pliers and position the nut within the folded rim of the stainless top and underneath the hole.

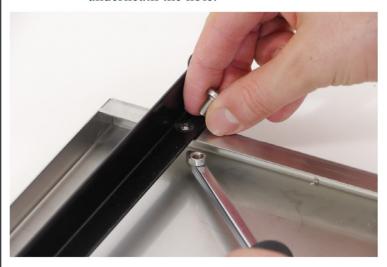

Step 8. Insert the screw from above but keep connection loose until all 4 screws have been



started. Then tighten all 4 screws and nuts until secure. Hold the nuts with a wrench to tighten if necessary.

Step 9. The side shelf upgrade is complete. Repeat the process for the second shelf.



© Saffire Grill Co. 2016. All Rights Reserved.